

# Modular Work Centers

## Portable Carton Rack (D-9060)

CALSTONE INC. - 020107


### Component Parts:

- 1 - Portable Carton Rack 18 x 44
- 5 - Wire Dividers
- 10 - 1/2"-13 Hex Nut
- 20 - 1/2" Flat Washers
- 4 - 3/8"-16 x 1-1/4" Levellers

*(Inspected by)*

### Carton Rack Assembly:

1. Place portable carton rack on floor with threaded holes facing up, and screw levellers into threaded holes.
2. Turn portable carton rack onto levellers.
3. Insert dividers (5 provided) where desired.
4. Turn portable carton rack, complete with dividers in place, onto its side.
5. From bottom of portable carton rack, place washer onto dividers and secure tightly with nuts.
6. Turn portable carton rack, with dividers in place, upright.

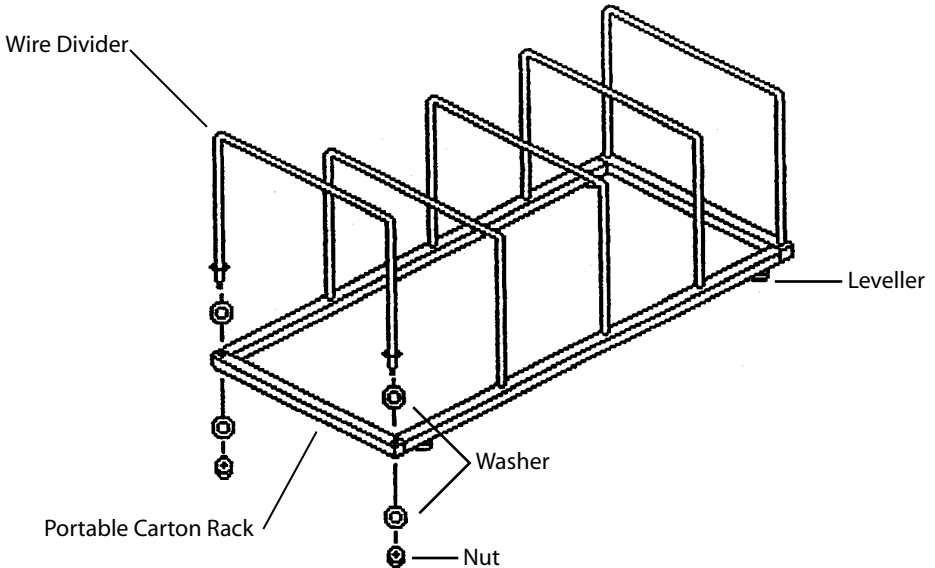

\*Do not discard packaging material until all contents are located\*